

■ ILLUMINATED ENTRY SYSTEM

1. General

Whenever the driver's door outside handle is pulled and released, or the driver's or passenger's door is opened, the illuminated entry system turns on the illuminations around the driver's door key cylinder, ignition key cylinder and dome light (only when the control switch is at DOOR position) simultaneously. It is useful when entering the vehicle and inserting the ignition key into the cylinder in the dark.

In the new models, the light-off conditions have been modified as shown in the table below, for increased usefulness. The illuminations are immediately turned off if the ignition switch is turned to ACC or ON, or if all doors have been closed and locked.

► Timer Chart ◀

Components		Condition
Ignition Key	ACC, ON, ST	
	LOCK	
Driver's and Passenger's Doors	Open	
	Closed	
Driver's and Passenger's Door	Unlock	
	Lock	
Driver's Door Outside Handle Switch	On	
	Off	
Dome Light and Illuminations	On	
	Off	
Requirement		① ② ③ ④ ⑤ ⑥ ⑦

T<sub>1</sub>, T<sub>3</sub> : About 15 seconds, T<sub>2</sub>: About 0.6 seconds.

- Case ① : When the driver's door outside handle switch is disengaged, the dome and other lights light up for T<sub>1</sub> seconds.
- Case ② or ③ : If any door is opened, the dome and other lights light up, and remain on for T<sub>1</sub> seconds after the all doors are closed.
- Case ④ : When the ignition switch is at ACC or ON, closing all doors immediately turns off the dome and other lights.
- Case ⑤ , ⑥\* : While the dome and other lights are on (T<sub>1</sub> sec.), turning the ignition switch to ACC or ON, or locking all doors immediately turns off the dome and other lights. Within T<sub>3</sub> seconds thereafter, turning the driver's door outside handle switch from on to off will not turn on the dome light and others.
- Case ⑦\* : If any door is opened and then closed with all doors in locked position, it causes the dome light and others to turn off immediately. (This applies to keyless locking operation only.)  
Within T<sub>3</sub> seconds thereafter, turning the driver's door outside handle switch from on to off will not turn on the dome light and others.

\* : As for cases ⑥ and ⑦, the dome and other lights are turned off immediately, provided that the conditions of "the driver's and passenger's doors being closed and locked" are fully met.